



Which devices does Drive | Print (Version 5 and higher) support?

Knowledge base article #6441

Drive | Print Version 5 and higher supports the following devices:

Supported Sharp devices

Drive | Print supports any Sharp device that includes the **OSA 3.5 kit**.

- The **AMX3 kit** is used for authentication and accounting.
- The **AMX 2 option** improves the user experience. It allows the pull print app to be accessible after the user has logged in. If you do not have this option, the user will only be able to access the pull print app after login and before going to the menu of the device (to perform a scan or a copy, for example).



Note: Update OSA3 to OSA 3.5

Most OSA 3 devices can be updated to 3.5 via firmware.

Supported Toshiba devices

Drive | Print supports any Toshiba device supporting the **EWB** and **e-BRIDGE platform**.



Note

Devices need to support at least **OpenPlatform v2.3**. The EWB function has to be enabled.

The following devices are supported:

e-STUDIO type	Firmware min. (LDAP mode)	Firmware (MDS mode)	Tested firmware
5540C / 6540C / 6550C	T130 SY0W3400	T130SY0W4003	T130HD0W4003P (Fiery)
2040C / 2540C / 3040C / 3540C / 4540C	T140 SY0W3400	T140SY0W4003	T140SY0W4000
556 / 656 / 756 / 856	T190 SY0W1600	T190SY0W2001	
206L / 256 / 306 / 356 / 456 / 506	T160 SY0W1600	T201SY0W2002	
2050C / 2550C with hard disc	T569 SY0W1513		
2555C / 3055C / 3555C / 4555C / 5055C			T212HD0W2101E
287CS/347CS/407CS			T280HD0W2300

306LP		T201SY0W2002	
477S/527S			
5560C / 6560C / 6570C			
557 / 657 / 757 / 857			
207L / 257 / 307 / 357 / 457 / 507			T330HD0W1201



Devices not supported

The following devices are not supported:

- e-STUDIO385S
- e-STUDIO305CP
- e-STUDIO525P
- e-STUDIO305CS

Supported OKI devices

Drive | Print supports the following OKI devices:

- MC760 / MC770 / MC780
- ES7470 / ES7480
- MB760 / MB770
- ES7170
- ES9460 / ES9470 (*)
- ES9455 / ES9465 / ES9475
- ES9160 / ES9170 (*)



Note

Those devices listed above marked by an * require the **EWB** option to work properly.

Supported Xerox devices

Drive | Print supports many Xerox devices supporting the **Secure Access platform**. Please talk to our support for the list of supported devices.

Supported Lexmark devices

Drive | Print supports the following Lexmark devices:

Lexmark model	Firmware min.	Version min.
6500e	EC3	LHS30.JR.P303

C748	EC3	LHS30.CM4.P303
C792	EC3	LHS30.HC.P303
C925	EC3	LHS30.HC.P303
C950	EC3	LHS30.TP.P303
CS510	EC3	LW30.VY4.P328
CS796	EC3	LHS30.HC.P303
CX410	EC2	LW20.GM4.P231
CX510	EC2	LW20.GM7.P231
MS610	EC2	LW20.PR4.P235
MS810	EC2	LW20.DN4.P231
MS812	EC3	LW30.DN7.P328
MS911	EC4.1	LW41.SA.P454
MX410	EC2	LW20.SB4.P231
MX510	EC2	LW20.SB4.P231
MX511	EC2	LW20.SB4.P231
MX610	EC2	LW20.SB7.P231
MX611	EC2	LW20.SB7.P231
MX6500e	EC0	LW20.JD.P035a
MX710	EC2	LW20.TU.P231
MX711	EC2	LW20.TU.P231
MX810	EC2	LW20.TU.P231
MX811	EC2	LW20.TU.P231
MX812	EC2	LW20.TU.P231
T656	EC1	LSJ.SJ.P019S1
X463	EC6.1	LR.BS.P631
X464	EC6.1	LR.BS.P631
X466	EC6.1	LR.BS.P631
X548	EC3	LHS30.VK.P303
X651	EC6.1	LR.MN.P631a
X652	EC6.1	LR.MN.P631a
X654	EC6.1	LR.MN.P631a
X656	EC6.1	LR.MN.P631a
X658	EC6.1	LR.MN.P631a
X734	EC6.1	LR.FL.P631
X736	EC6.1	LR.FL.P631
X746	EC3	LHS30.NY.P303

X748	EC3	LHS30.NY.P303
XS748e (not tested)	EC3	LHS30.NY.P303
X792	EC3	LHS30.MR.P303
X860	EC6.1	LP.SP.P631
X862	EC6.1	LP.SP.P631
X864	EC6.1	LP.SP.P631
X925	EC3	LHS30.HK.P303
X950	EC3	LHS30.TQ.P303
X952	EC3	LHS30.TQ.P303
X954	EC3	LHS30.TQ.P303
XS463	EC6.1	LR.BS.P631
XM3150 (not tested)	EC2	LW20.SB7.P231

Supported Kyocera devices

Drive | Print supports all Kyocera devices supporting **HyPAS Embedded**.

The following list comprises all supported devices as described in the **SDK v1.5.71** released the 27th of October 2014:

- TASKalfa 300i
- TASKalfa 420i
- TASKalfa 520i
- TASKalfa 250ci
- TASKalfa 300ci
- TASKalfa 400ci
- TASKalfa 500ci
- TASKalfa 552ci
- TASKalfa 3050ci
- TASKalfa 3550ci
- TASKalfa 4550ci
- TASKalfa 5550ci
- TASKalfa 6550ci
- TASKalfa 7550ci
- TASKalfa 3500i
- TASKalfa 4500i
- TASKalfa 5500i
- TASKalfa 6500i
- TASKalfa 8000i
- TASKalfa 2550ci
- FS-C2526MFP
- FS-C2626MFP
- FS-3540MFP
- FS-3640MFP
- TASKalfa 265ci
- TASKalfa 7551ci
- TASKalfa 6551ci
- TASKalfa 5551ci
- TASKalfa 4551ci
- TASKalfa 3551ci
- TASKalfa 3051ci
- TASKalfa 8001i
- TASKalfa 6501i
- TASKalfa 5501

- TASKalfa 4501i
- TASKalfa 3501i
- FS-6525MFP (TASKalfa 256i)
- FS-6530MFP (TASKalfa 306i)
- FS-C8520MFP (TASKalfa 206ci)
- FS-C8525MFP (TASKalfa 256ci)
- TASKalfa 2551ci
- TASKalfa 3510i
- TASKalfa 3010i
- M6026cidn
- M6526cidn (TASKalfa 266ci)
- M3560idn
- M3550idn
- M3540idn
- M3040idn
- M6035cidn
- M6535cidn
- TASKalfa 306ci
- TASKalfa 356ci
- TASKalfa 406ci

Supported Brother devices

Drive | Print supports the following Brother devices:

Product Category	Brother Machine Model
Multi-Function Center	MFC-8510DN, MFC-8520DN, MFC-8710DN, MFC-8910DW, MPC-8950DW, MFC-9130CW, MFC-9140CDN, MFC-9330CDW, MFC-9340CDW, MFC-9970CDW, MFC-J5320DW MFC-J5520DW, MFC-J5620DW, MFC-J5620DW, MFC-J5625DW, MFC-J5720CDW, MFC-5920CDW, MFC-J5920DW, MFC-J6720DW, MFC-J6920DW, MFC-J6925DW, MFC-L500DW, MFC-L5800DW, MFC-L5900DW, MFC-L6700DW, MFC-L6750DW, MFC-L680ODW MFC-L69OODW MFC-L8600CDW, MFC-L865OCDW MFC-L885OCDW, MFC-L9550CDW